



# Functions and Operating Instructions



This handbook explains the functions and operating procedures of stations for the EXES-2000 intercom system. While all the stations and functions are described in this booklet, your system does not employ all of such functions. You may only read instructions on the functions that are incorporated in your system.

Part 1. Basic speech functions, their operating procedures and all functions.

Part 2. Functions and operating procedures of system for a maximum of 32 stations.

## ● Contents

### ● Introduction to the "Functions and Instructions" for stations for EXES-2000.

#### Part 1. Basic speech functions, their operating procedures and all functions.

|  |    |
|--|----|
| 1. Type of stations .....  | 2  |
| 2. Speech functions .....  | 3  |
| 3. Station operation   |    |
| 1) Handset operated master station (TL-600M/610M/620M).....          | 4  |
| 2) Handset operated substation (TL-600S) .....                       | 4  |
| 3) Handsfree master station (HF-210M/210MB/670M).....                | 5  |
| 4) Handsfree substation .....  | 6  |
| 5) Door substation (HF-640S).....                                    | 6  |
| 6) Handsfree/handset master station (HF-200M/200MB/220MB/660M) ..... | 7  |
| 7) Handsfree handset substation .....                                | 8  |
| 8) Handsfree/handset master station with auto dialer (HF-660M) ..... | 9  |
| 4. All functions of EXES-2000 .....                                  | 10 |

#### Part 2. Functions and operating procedures of system for a maximum of 32 stations.

|  |    |
|--|----|
| 1. Dial operation of EXES-2000 .....   | 11 |
| 2. Function description                |    |
| 1) Privacy .....                       | 12 |
| 2) Camp-on-Privacy .....               | 13 |
| 3) Press to talk .....                 | 13 |
| 4) Mic off .....                       | 14 |
| 5) Call forwarding .....               | 14 |
| 6) Hurry up .....                      | 15 |
| 7) Camp-on-busy .....                  | 15 |
| 8) Busy call back .....                | 16 |
| 9) Call transfer .....                 | 17 |
| 10) Conference .....                   | 18 |
| 11) Personal number call .....         | 19 |
| 12) Master/substation .....            | 20 |
| 13) Executive priority .....           | 20 |
| 14) Secretary transfer .....           | 21 |
| 15) Continuous call tone station ..... | 22 |
| 16) Station paging .....               | 23 |
| 17) BGM .....                          | 25 |
| 18) Alarm/time information .....       | 25 |
| 19) Poket pagers .....                 | 26 |
| 20) Door remote control .....          | 27 |
| 21) Press-to-talk control .....        | 27 |
| 22) PA paging .....                    | 28 |
| 23) Simplified paging .....            | 28 |
| 24) General purpose control .....      | 29 |
| 25) Speech message .....               | 29 |
| 26) Tie-line .....                     | 31 |
| 27) Points to remember .....           | 31 |

## **Part 1**


**Basic speech functions, their operating procedures and all functions**

# 1. Type of stations

---

**(1) HF-200M/HF-200MB**

Desk/surface-mounted handsfree/handset master station

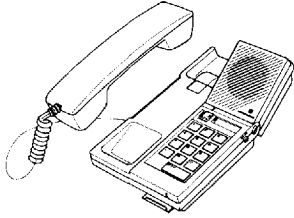


**(2) HF-210M/HF-210MB**

Desk/surface-mounted handsfree master station




**(3) TL-600M**

Desk/surface-mounted handset operated master station

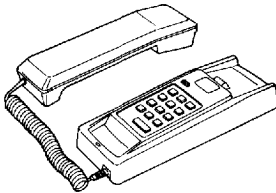


**(4) TL-600S**

Desk/surface-mounted handset operated substation

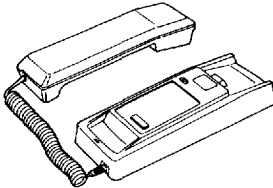


**(5) TL-610M**

Desk-top type handset operated master station

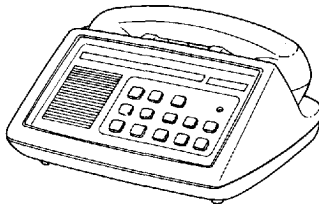


**(6) TL-620M**

Surface-mounted handset operated master station

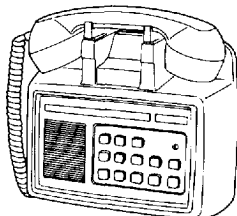


**(7) HF-640S**

 Door station

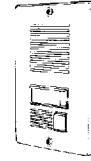


**(8) HF-670M**

Industrial-use handsfree master station

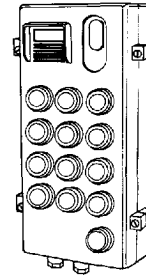


**(9) HF-660M**


Desk/surface-mounted handsfree/handset master station

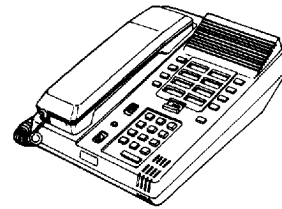


**HF-200M  
+ YC-230M**

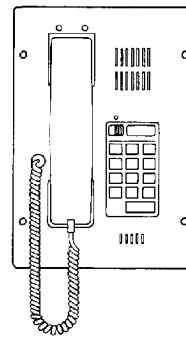


**HF-200M  
+ YC-230S**

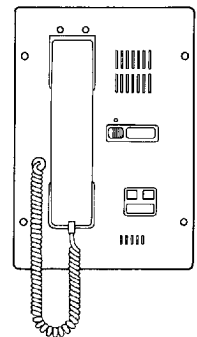

**HF-210M  
+ YC-240M**

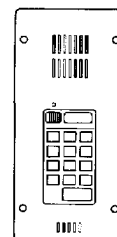 

**HF-210M  
+ YC-240S**

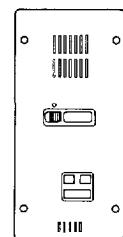


## 2. Speech function

|                | Functions  | Descriptions  | Stations  |   | Privacy SW |
|----------------|--|---|---|---|------------|
|                |  |   | Without Privacy SW                                    | With Privacy SW   |            |
| Calling        | Dialing  | Calls can be made by dialing station number. Even if the Privacy SW is on, calling is possible.   | HF-670M   | HF-660M<br>HF-200M<br>HF-200MB<br>HF-210M<br>HF-210MB<br>HF-220MB | ON/OFF     |
|                | One-touch dialing  | Substations can make a call to the designated master stations by one-touch dialing. Calling is possible even if the Privacy SW is on.   | HF-640S   | —   | ON/OFF     |
|                | Dialing after picking up handset and (*1) confirming dial tone | Calls can be made by dialing keys after picking up the handset and confirming the dial tone.  | TL-600M<br>TL-610M<br>TL-620M                         | HF-660M<br>HF-200M<br>HF-200MB<br>HF-220MB                        | ON         |
|                | Calling by picking up handset (*1)                             | Substations can make a call to the designated master stations just by picking up the handset.   | TL-600S   | —   | ON         |
| Voice          | Voice calling  | While calling by continuous calling tone or privacy tone, voice can be sent by pressing <input type="checkbox"/> key.   | All stations except HF-640S                           |   | ON/OFF     |
| Receiving      | Hands-free calling and conversation                            | Dialing station number causes a brief call tone to be sounded in both calling and called stations and permits handfree conversation.  | HF-640S<br>HF-670M                                    | HF-660M<br>HF-200M<br>HF-200MB<br>HF-210M<br>HF-210MB<br>HF-220MB | OFF        |
|                | One-touch response to continuous call (*1)                     | The party who was called by a continuous call tone can respond to the call and begin handsfree conversation by pressing the <input type="checkbox"/> ~ <input type="checkbox"/> , <input type="checkbox"/> or <input type="checkbox"/> key.   | HF-640S<br>HF-670M                                    | HF-660M<br>HF-200M<br>HF-200MB<br>HF-210M<br>HF-210MB<br>HF-220MB | OFF        |
|                | Privacy  | When calls are unwanted, turn on Privacy SW. A brief Privacy tone sounds when called. By turning off Privacy SW or touching any key ( <input type="checkbox"/> ~ <input type="checkbox"/> , <input type="checkbox"/> , <input type="checkbox"/> key) or picking up the handset, the incoming call may be connected. | —   | HF-660M<br>HF-200M<br>HF-200MB<br>HF-210M<br>HF-210MB<br>HF-220MB | ON         |
|                | Handset response to continuous call (in Privacy mode) (*1)     | When called by continuous calling tone, conversation is possible by picking up the handset.   | TL-600M/S<br>TL-610M<br>TL-620M                       | HF-660M<br>HF-200M/MB<br>HF-220MB                                 | ON         |
|                | One-touch response to continuous call (in Privacy mode) (*1)   | Response can be made just by touching any one of <input type="checkbox"/> ~ <input type="checkbox"/> , <input type="checkbox"/> or <input type="checkbox"/> keys without picking up the handset when called by continuous calling tone.   | —   | HF-660M<br>HF-200M<br>HF-200MB<br>HF-210M<br>HF-210MB<br>HF-220MB | ON         |
| Speech methods | Voice switch conversation                                      | Handsfree conversation may be achieved.   | HF-640S<br>HF-670M                                    | HF-660M<br>HF-200M<br>HF-200MB<br>HF-210M<br>HF-210MB<br>HF-220MB | ON/OFF     |
|                | Simplex conversation by Press-to-talk key                      | Continuously pressing <input type="checkbox"/> allows one-way conversation from a party who presses <input type="checkbox"/> . Releasing the <input type="checkbox"/> key will reverse the one-way conversation flow.   | HF-670M   | HF-660M<br>HF-200M<br>HF-200MB<br>HF-210M<br>HF-210MB<br>HF-220MB | ON/OFF     |
|                | Fully duplex conversation                                      | If at least either party uses the handset, the conversation is fully duplex.  | TL-600M/S<br>TL-610M<br>TL-620M<br>HF-640S<br>HF-670M | HF-660M<br>HF-200M<br>HF-200MB<br>HF-210M<br>HF-210MB<br>HF-220MB | ON/OFF     |

\*1) No. 24 programming must be established.

### 3. Station operation

#### 1) Handset Master Station Model TL-600M/TL-610M/TL-620M

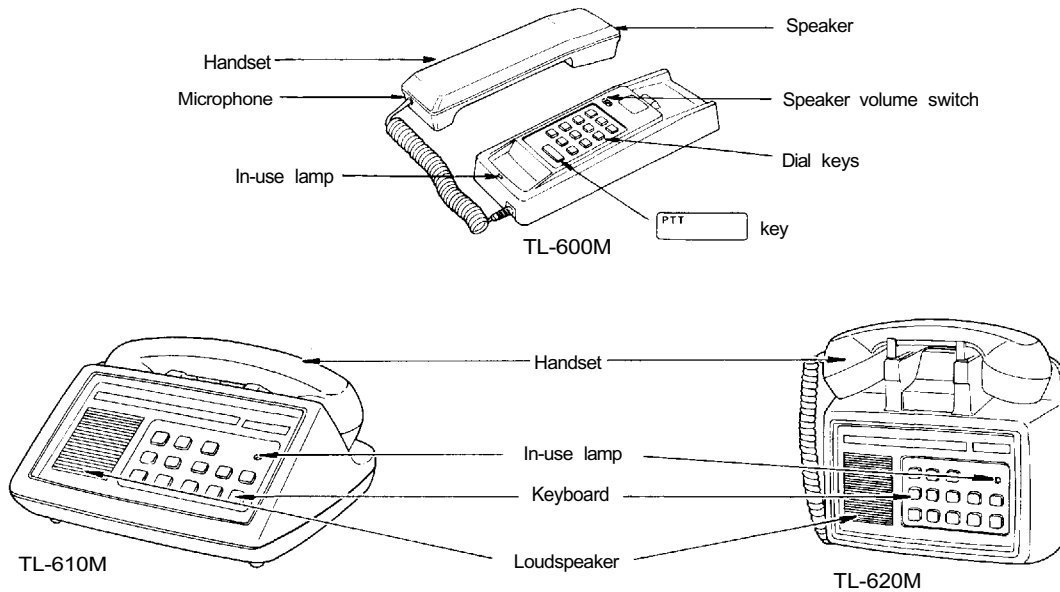

##### <Making a call>

1. Pick up the handset and dial the station number after hearing dial tone.
2. Begin to speak after the calling tone has been heard.
3. When you hear a busy tone, simply wait without hanging up the handset. As soon as the line becomes free, your call is automatically connected.
4. By pressing the  PTT key while the continuous call tone is ringing, a one-way voice call can be made.
5. Hang up the handset or depress the  key to terminate the conversation.


##### <Responding to a call>

6. When you were called by the continuous calling tone or voice through your station speaker, respond to the call by picking up the handset.

##### Note.

- 1) Call tone volume may be adjusted by means of a 2-stage volume selector (SP. VOL) switch.
- 2) No. 24 programming must be established before using these stations.

#### 2) Handset substation Model TL-600S

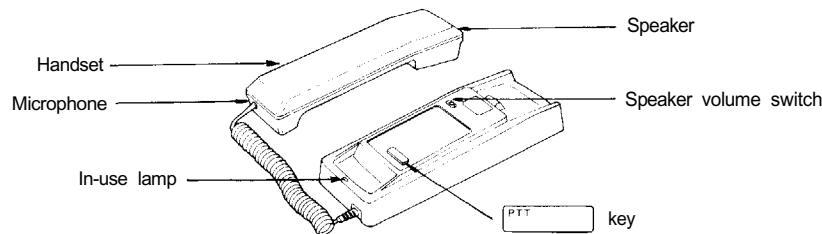

##### <Making a call>

1. Picking up the handset makes a call to the designated master station.
2. Begin to speak after the calling tone stops.
3. When you hear a busy tone, simply wait without hanging up the handset. As soon as the line becomes free, your call is automatically connected.
4. It is possible to place a one-way voice call by pressing the  PTT key while the call tone is sounding.
5. Hang up the handset to terminate the conversation.



##### <Responding to a call>

6. When you were called by the continuous calling tone or voice through your station speaker, respond to the call by picking up the handset.


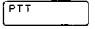
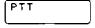

##### Note.

- 1) Call tone volume may be adjusted by means of a 2-stage volume selector (SP. VOL) switch.
- 2) No. 24 programming must be set up before using this station.


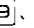
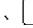

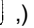

### 3) Hands-free Master Station Model HF-210M/210MB/670M

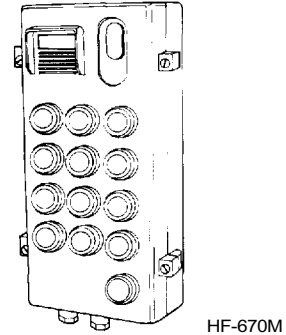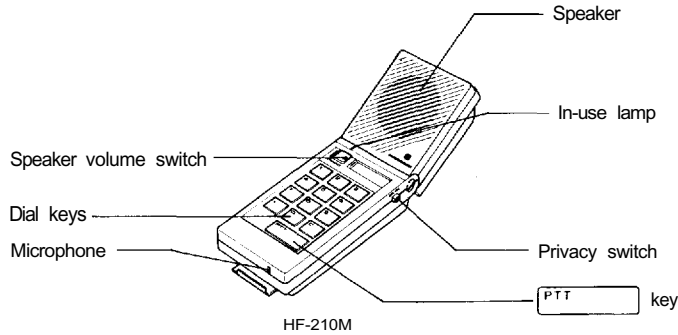

#### <Making a call>

1. Dial the station number. (Dialing can be accomplished even when your station is in the Privacy mode.)
2. Begin to speak after the calling tone has been heard.
3. When the line is busy, simply wait. As soon as the line becomes free, your call is automatically connected.
4. Continuously depressing the  key while the continuous call tone or Privacy tone is being heard allows a one-way voice call through the station speaker of the called party.
5. When the called party is in a high noise level area, by depressing the  key one-way conversation to that party can be achieved. Releasing the  key will reverse the one-way conversation flow.
6. To terminate the conversation, depress the  key.

 

#### <Responding to a call>

7. In the case that the Privacy switch is in the OFF position, respond to the call after the calling tone stops.
8. When the Privacy switch is in the ON position, a brief Privacy tone sounds each time there is an incoming call and it is refused.  
To respond touch-dial any key (  -  ,  ,  ,  , ) other than the  key while being called, (a maximum of 5 seconds).

#### Note.

- 1) Speaker volume may be adjusted by means of the 2-stage volume selector (VOL) switch.
- 2) The HF-670M needs an external PA speaker because it has no built-in speaker nor Privacy switch.

## 4) Hands-free Substation

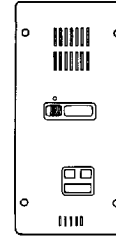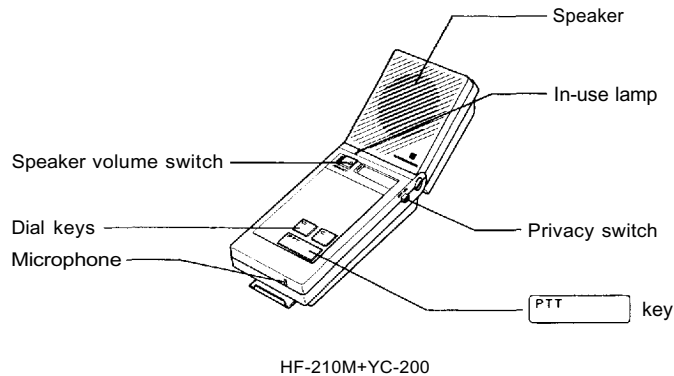

### <Making a call>

1. Touching the  key calls the designated master station regardless of the position of the Privacy switch.
2. Begin to speak after the calling tone has been heard.
3. When the line is busy as indicated by a busy tone simply wait. As soon as the line becomes free, the call is automatically connected.
4. Continuously depressing the  PTT key while the continuous call tone or Privacy tone is being heard allows a one-way voice call through the station speaker of the called party.
5. When the called party is in a high noise level area, by depressing the  PTT key one-way conversation to that party can be achieved. Releasing the  PTT key will reverse the one-way conversation flow.
6. To terminate the conversation, depress the  key.

 
### <Responding to a call>

7. In the case that the Privacy switch is in the OFF position, respond to the call after the calling tone stops.
8. When the Privacy switch is in the ON position, a brief Privacy tone sounds each time there is an incoming call and it is refused. To respond, touch dial the  or  key within 5 seconds after the call has been established.

#### Note.

Speaker sound volume may be adjusted by means of the 2-stage volume selector (VOL) switch.

## 5) Door Substation Model HF-640S

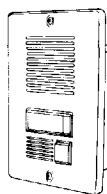



HF-640S

### <Making a call>





1. Pressing a button calls the specified master station.
2. Speak when a calling tone stops.
3. When a busy tone is heard, simply wait. You are put through the master station as soon as its line is freed.
4. If there is no response even after a calling tone has stopped, press the button again and again. The calling tone is sounded each time the button is pressed.
5. Conversation or continuous calling tone is terminated unless the button is pressed every 20 seconds.



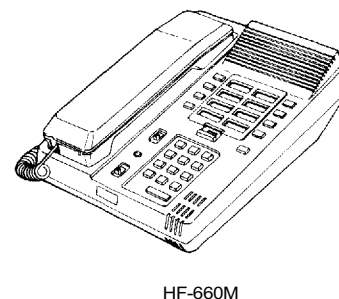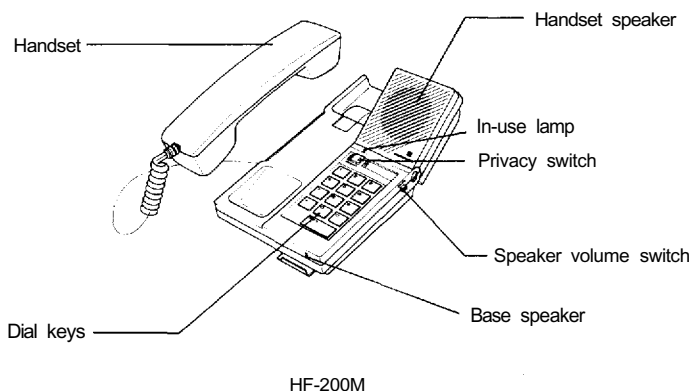



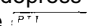
## 6) Hands-free/Handset Master Station Model HF-200M/200MB/220MB/660M (With Auto-Dialer)

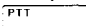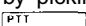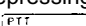

### <Making a call>

1. Hands-free conversation may be made by simply dialing the station number.
2. When it is desirable to use the handset, dial after picking up the handset or first pick up the handset and then dial.
3. Begin to speak after the calling tone has been heard.
4. When you hear a busy tone simply wait. As soon as the line becomes free, your call is automatically connected.
5. It is possible to make a one-way voice call by pressing the  key while a busy tone or Privacy tone is audible.
6. When either party is in a high noise level area during handsfree conversation, the other party can send his voice by picking up the handset or continuously depressing the  key while talking. Depressing the  key allows one-way conversation and releasing it reverses the one-way conversation flow.
7. To terminate the conversation, hang up the handset or depress the  key.


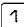
### <Responding to a call>

8. When desiring a handsfree response to the call received with the Privacy switch set to OFF, just speak into the mic after the call tone stops, Pick up the handset and begin to speak when the handset conversation is desirable.
9. In the case that the Privacy switch is in the ON position, a brief Privacy tone will sound each time there is an incoming call and all incoming calls are refused. To respond, depress any key (  ~  ,  ,  , key icon" data-bbox="884 511 898 523"/> , ) other than the  key or pick up the handset while the line is still connected. The call is cancelled when no response is made within 5 seconds after the call establishment.

### Note.

- 1) The sound volume of the handset speaker may be adjusted by means of the 2-stage volume selector (VOL) switch. (Three-step control for the HF-660M)
- 2) For calls or responses made from the station registered as handset operated station by No. 24 programming, refer to the section Handset operated master stations (TL-600M/610M/620M).

## 7) Hands-free/Handset Substation

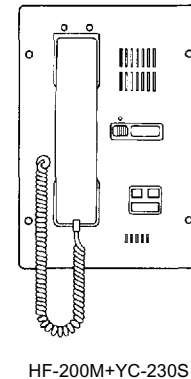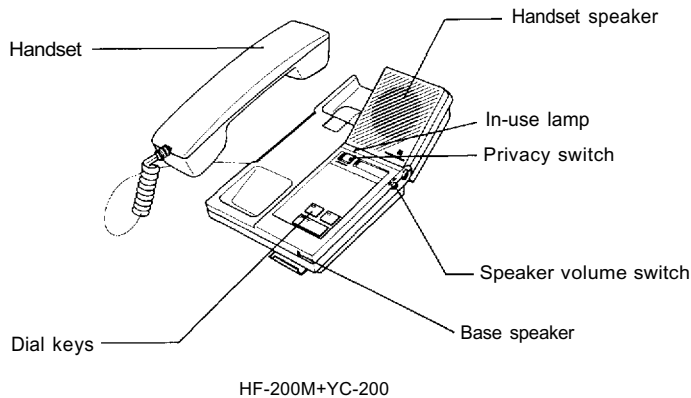

### <Making a call>

1. Touching the  key allows a handsfree call to the designated master station.
2. When it is desirable to use the handset, lift the handset and press the  key or first press the  key and then pick up the handset.
3. Begin to speak after the calling tone has been heard.
4. When the called party is busy, just wait. You can be put through as soon as the line is free.
5. It is possible to transmit a one-way message by depressing the  key while the call tone is ringing or Privacy tone is heard.
6. When either party is in a high noise level area during handsfree conversation, the other party can send his voice by using the handset or continuously depressing the  key while talking. Depressing the  key allows one-way conversation from the party who depresses it, and releasing the key reverses the one-way conversation flow.
7. To terminate the conversation, hang up the handset or depress the  key.


### <Responding to a call>

8. When desiring a handsfree response to the call received with the Privacy switch set to OFF, just speak into the mic after the call tone stops. Pick up the handset and begin to speak when the handset conversation is desirable.
9. In the case that the Privacy switch is in the ON position, a brief Privacy tone will sound each time there is an incoming call and all incoming calls are refused. To respond, depress the  or  key or pick-up the handset while the line is still connected. The call is automatically cancelled when no response is made within 5 seconds after the call has been placed.

#### Note.

- 1) The sound volume of the handset speaker may be adjusted by means of the 2-stage volume selector (VOL) switch.
- 2) For calls or responses made from the station registered as handset operated station by No. 24 programming, refer to section 2) Handset substation (TL-600S).

## 8) Hands-free/Handset Master Station with Auto-Dialer Model HF-660M

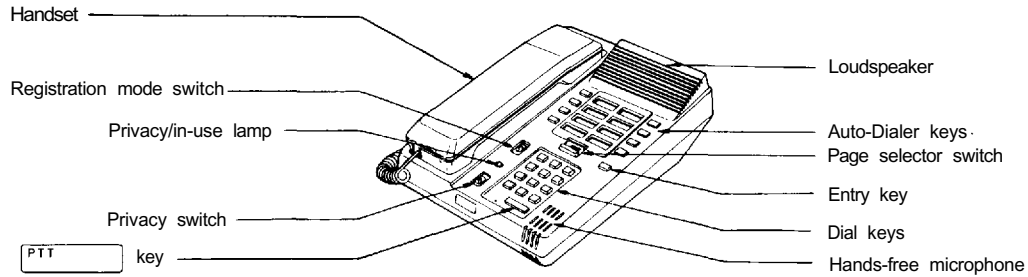


### <Making a call>

1. Place the registration mode switch (REGISTER) in the OFF position.
2. A maximum of 16 station numbers each for page A and B may be programmed into this station. It is possible to call such a programmed station by one-touch dialing the Auto-dialer key or by normally dialing the station number. Connecting the **AK-024** auto-dialer key unit allows 24 more station numbers to be registered for one-touch dialing.

### Note.

1. Call tone volume can be adjusted by means of the 3-stage selector (SP VOL) switch.
2. For instructions on how to call and respond without using the Auto-Dialer, refer to section 6 Handsfree/handset master stations (HF-200M/200MB/220MB/660M).

### <How to make Registration at Auto-Dialer>

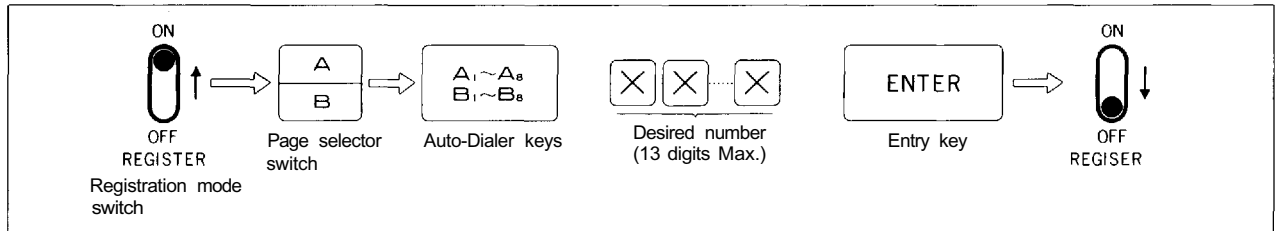

1. Set the registration mode switch (REGISTER) to ON. The Privacy/in-use lamp comes on green and a confirmation tone is heard.
2. Place the page selector switch in either **A** or **B** position.
3. Press the Auto-Dialer key ( **A<sub>1</sub>~A<sub>8</sub>~B<sub>1</sub>~B<sub>8</sub>** ), to be used.
4. Register the desired number through dial key ( **1~9, \*, #** ) operation (13 digits Max.)
5. Press the entry key ( **ENTER** ). The confirmation tone is again heard and registration is completed.
6. Repeat the procedures described in (2) through (5) each time registration is made.
7. To cancel the registration, press the Auto-Dialer key ( **A<sub>1</sub>~A<sub>8</sub>~B<sub>1</sub>~B<sub>8</sub>** ) and the entry key ( **ENTER** ).
8. Shift the registration mode switch back to OFF, and the lamp goes out and the station is put in the speech made.

## 4. All functions of EXES-2000

| No. | Classification | Functions  | Basic functions       | Selectable functions (No. 24 programming must be established) | Additional functions  |
|-----|----------------|--|-----------------------|---|-----------------------|
| 1   |                | Camp-on-busy   | <input type="radio"/> |   |                       |
| 2   |                | Busy call-back   | <input type="radio"/> |   |                       |
| 3   |                | Mic off  | <input type="radio"/> |   |                       |
| 4   |                | Master-sub relationship  |                       | <input type="radio"/>   |                       |
| 5   | Call           | Privacy/Camp-on-privacy  | <input type="radio"/> |   |                       |
| 6   |                | Continuous call tone station (*1)  |                       | <input type="radio"/>   |                       |
| 7   |                | Handset operated station (*2)  |                       | <input type="radio"/>   |                       |
| 8   | PTT            | Press to talk  | <input type="radio"/> |   |                       |
| 9   |                | Talkback   |                       |   | <input type="radio"/> |
| 10  |                | Press-to-talk control  |                       |   | <input type="radio"/> |
| 11  |                | Personal number call   | <input type="radio"/> |   |                       |
| 12  |                | Conference   | <input type="radio"/> |   |                       |
| 13  | Transfer       | Call transfer  | <input type="radio"/> |   |                       |
| 14  |                | Call forwarding  |                       | <input type="radio"/>   |                       |
| 15  |                | Secretary transfer   |                       | <input type="radio"/>   |                       |
| 16  |                | Hurry up   | <input type="radio"/> |   |                       |
| 17  |                | Executive (Highest) priority   |                       | <input type="radio"/>   |                       |
| 18  | Paging         | Station paging (all-call paging + 3 zone paging calls) and its response (*3) |                       | <input type="radio"/>   |                       |
| 19  |                | PA paging call-up (all-call paging + 3 zone paging) and its response (*3)    |                       | <input type="radio"/>   | <input type="radio"/> |
| 20  |                | Selected station paging  |                       | <input type="radio"/>   |                       |
| 21  |                | Emergency all-call paging  |                       | <input type="radio"/>   |                       |
| 22  | Selection      | PA paging & power remote/3-channel general purpose control                   |                       | <input type="radio"/>   | <input type="radio"/> |
| 23  |                | Time-Out of paging call (no limit/20 seconds)                                |                       | <input type="radio"/>   |                       |
| 24  |                | Speech message hurry up recording (with/without)                             |                       | <input type="radio"/>   |                       |
| 25  |                | 3-channel BGM  |                       | <input type="radio"/>   | <input type="radio"/> |
| 26  |                | Alarm and time signal  |                       | <input type="radio"/>   | <input type="radio"/> |
| 27  |                | Pager calling and response   |                       |   | <input type="radio"/> |
| 28  |                | Door remote control (2 circuits)   |                       | <input type="radio"/>   | <input type="radio"/> |
| 29  |                | Speech message   |                       | <input type="radio"/>   | <input type="radio"/> |
| 30  |                | Tie-line   |                       | <input type="radio"/>   | <input type="radio"/> |

### Note.

XX/YY shows either XX (function) or YY (function) can be selected.

\*1 The station having its Privacy switch in the OFF mode can select either a "brief" call tone or "continuous" call tone. (The station without the Privacy switch is the same as one having its Privacy switch in OFF.)

\*2 With the Privacy switch in the ON position, either the "Privacy tone" or "continuous tone" can be selected. (The handset operated station is always in the same Privacy state as the station whose Privacy switch is set to OFF.)

\*3 Each paging channel can be either station paging or PA paging or combined station and PA paging.

## Part 2


Functions and operating procedures of system for a maximum of 32 stations

# 1. Dial operations of EXES-2000

| Classification       | Functions                                  | Operating procedures   |  |
|----------------------|--|--|--|
| Speech               | Press to talk                              | One-way conversation       Normal two-way conversation   |  |
|                      | Response to call by continuous call tone   | ~  ,  ,  or  |  |
|                      | Privacy                                    | Privacy mode       Non-privacy mode  |  |
|                      | Secretary transfer                         | Secretary transfer mode       Cancellation of secretary transfer   |  |
|                      | Master/substation                          | (Lift handset in the event of handset station.)  |  |
|                      | Personal number registration               | (Confirmation tone)<br>Personal number   | 1xx:100~131                            |
|                      | Personal number cancellation               | (Confirmation tone)<br>Personal number   |  |
|                      | Personal number call                       | <br>Personal number  |  |
|                      | Registration of call forwarding            | (Confirmation tone)<br>Station number call is to be transferred to. (Only cancelled from originally assigned station.) |  |
|                      | Mic off                                    | Press  again to restore original conversation  |  |
|                      | Hurry up                                   | Press  when called station is busy.  | xx = Station number or personal number |
|                      | Executive priority                         | Press   when called station is busy.   |  |
|                      | Registration of busy call back             | Press  (confirmation tone) when called station is busy.<br>xx = Station number or personal number                      |  |
|                      | Response to busy call back                 | ~  ,  ,  or  |  |
|                      | Call transfer                              | →  Transfer<br>→   Return to original conversation.<br>xx = Station number or personal number                          |  |
| Paging               | All call paging + individual 3-zone paging | xx = 0 (all-call) or 1 through 3-zone paging   |  |
|                      | Selected station paging                    | ...         xx = Station number  |  |
|                      | Paging response                            | <br>1 through 3 (zone paging)<br>4 (selected station paging)   |  |
|                      | Emergency all-call paging                  |  |  |
|                      | Response to emergency all call paging      |  |  |
| Conference           | Conference call                            | xx = Station number or personal number   |  |
|                      | Conference entry clear                     |  |  |
| Additional functions | 2-circuit door remote control              | (Confirmation tone) x = 2 or 3   |  |
|                      | 3-line general purpose control             | (Confirmation tone) x = 4 through 9  |  |
|                      | 3-channel BGM                              | x = 0 (OFF), 1~3 (channel)   |  |
|                      | Pager call                                 | plus  (Confirmation tone)<br>xx = Station number (pager receiver number)<br>(Confirmation tone)<br>xx = 00~99          |  |
|                      | Pager response                             | xx = 00~99   |  |
|                      | Speech message recording                   |  |  |
|                      | Recorded message playback                  |  |  |
|                      | Recorded message erasure                   | (Confirmation tone)  |  |
|                      | Speech message mode registration           | (Confirmation tone) x = 0~2  |  |
|                      | Speech message                             | (Called party's message)       (Caller's message)       (Play back)  |  |
|                      | Tie-line                                   | Call tone<br>Call tone<br>(xx = Station number or personal number of other exchange)                                   |  |


## 2. Function description

### 1) Privacy

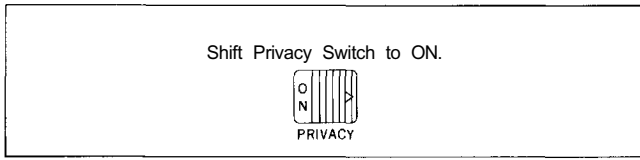

When a party does not wish to accept incoming calls, this function may be employed to refuse them. With the Privacy switch in the ON position, a continuous privacy tone will be sounded for 5 seconds in the station making the call, and at the same time, a brief privacy tone will sound twice in the station called, indicating a call attempt is being made.



It is possible to call the other party from the station in the privacy mode.

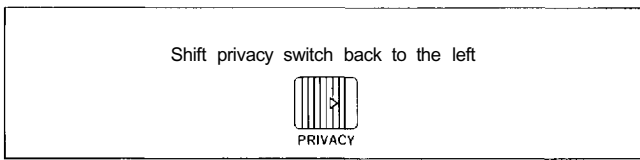




To restore a station in the "Privacy" mode to a normal condition, and thus ready to receive calls.


During the "Privacy" mode, while the calling station has the  PTT bar depressed, the privacy tone stops and the caller can transmit a one way message.

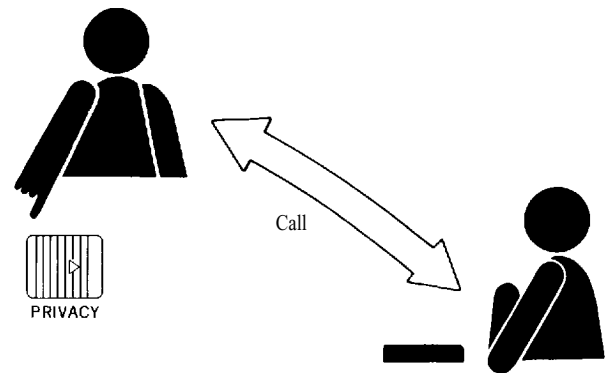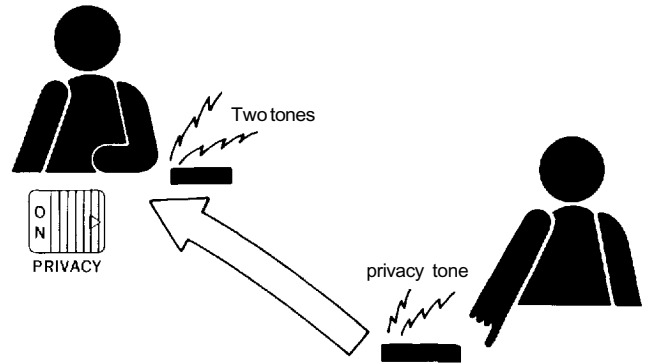When the  PTT bar is released, the normal "Privacy" mode is resumed.



## 2) Camp-on privacy

When the party you are calling has his station on privacy mode, by simply waiting you will automatically "camp-on" the line. (Privacy tone sounds continuously.) As soon as the Privacy mode is released, or as soon as he dials any one of  or  or  key, or as soon as he picks up a handset of his station, you will be automatically connected.

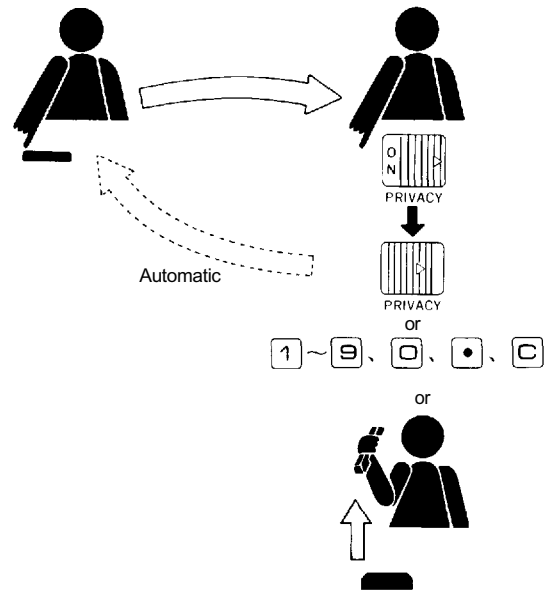

## 3) Press-to-Talk

This function is activated when the

PTT  (Press-To-Talk Bar)


is continuously depressed after completion of calling tone or during hands-free conversation. This allows one-way conversation from the party depressing the function key. When the key is released, one-way conversation is reversed.

Employed when a person in a high noise level area is called by a person in a quiet area, or when no particular response is required, or when simple announcements are made. In such cases, one-way conversation flow can be used.

One-way conversation is activated while the press-to-talk bar is continuously depressed.

As long as the press-to-talk bar is depressed by either party, the voice of the party using this function has dominance. When the key is released, the other party has dominance.

If both parties depress the press-to-talk bar, the voice of the party who depressed the bar last will have dominance.

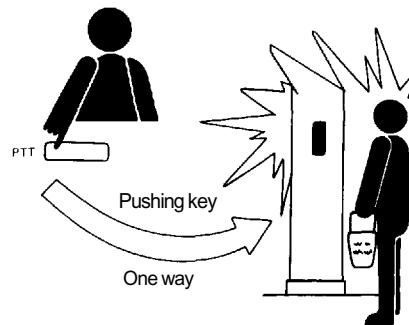


Depress




to return to ordinary hands-free 2-way conversation.

### Note.

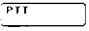
One-way conversation is impossible even if the  bar is depressed when at least either party uses a handset.




## 4) Mic Off

Touch dialing of  during a conversation turns off that station's microphone.

This function is used when for some reason it is desirable to stop a conversation temporarily.

Touch dialing of  again cancels the Mic-Off function, and the conversation can be resumed.


When it is desirable to resume the conversation interrupted with the mic off function, the function may be cancelled by the party who operated the mic-off.

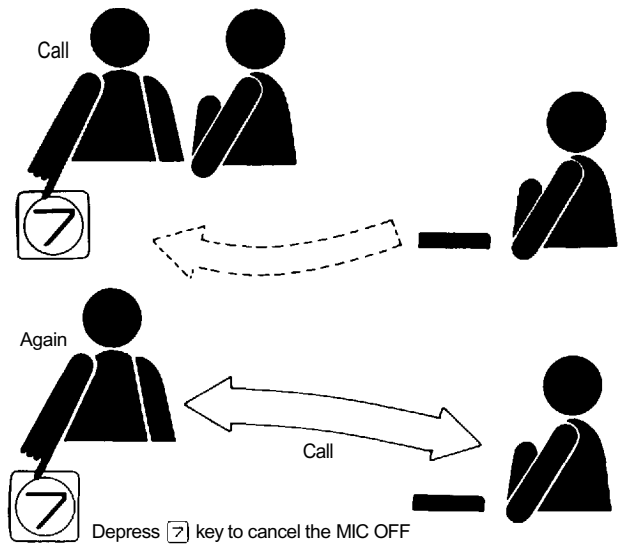


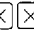

## 5) Call Forwarding

This function, when used, needs to be selected at the programming station No. 24 at time of system installation. When you will be away from your station and wish all incoming calls to be rerouted to a different destination you are going to move to, you can do so by registering that station number before you leave.

### • Registering Call Forwarding function

To program this function, touch-dial  plus the station number of the new destination. (Confirmation tone is heard.) The registration of this function may only be made at the original station and any previous programming made for this function is automatically cancelled each time the new programming is made.


### • Cancelling Call Forwarding program

Touch-dial    Your original station number at your assigned station.


### Note.

Before a call is automatically rerouted to the station registered with Call Forwarding function, a brief confirmation tone sounds at the original station, indicating that a call has been made and is going to be put through to the registered station.


### • Registration of Call Forwarding

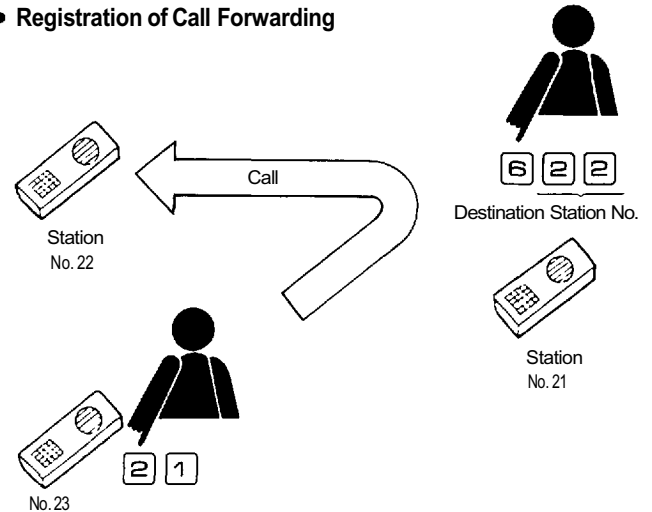

### • Cancellation of Call Forwarding

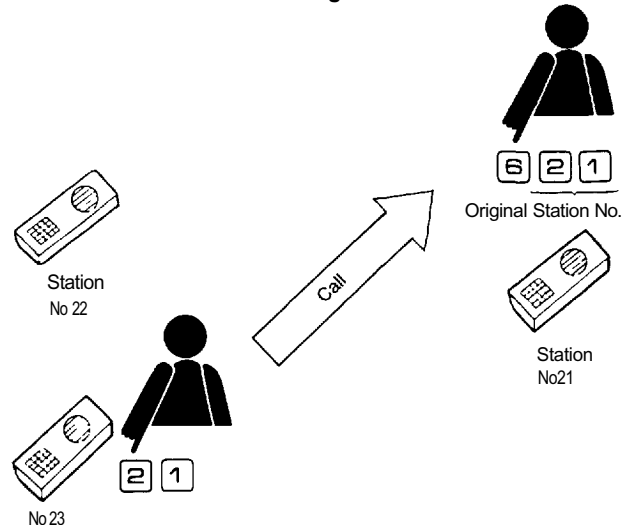


## 6) Hurry up

When a person called is busy as indicated by the busy tone, one-touch dialing  transmits a "hurry-up" tone to him and his conversation partner, reminding them to shorten the call. This tone is also audible at the calling station.

After the hurry-up tone has been sounded for about one second, it returns to the busy tone again in the calling station, while the state before the conversation was interrupted is restored between the interrupted parties.


### Note.

No hurry-up tone is heard in the called station that is making a paging call or receiving a station paging call.

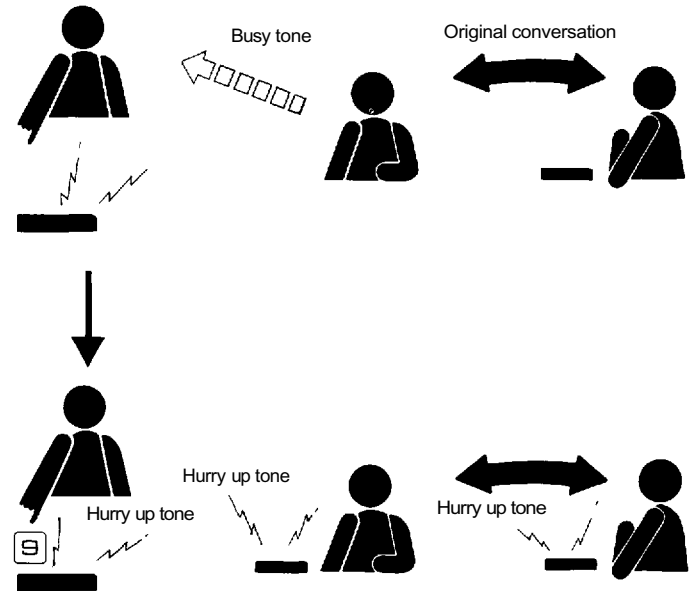

## 7) Camp-on-Busy

When the party you are calling is on another line by simply waiting you automatically "Camp-On" the line for 20 seconds. (Busy tone sounds continuously.) As soon as the line is freed, you will be automatically connected.

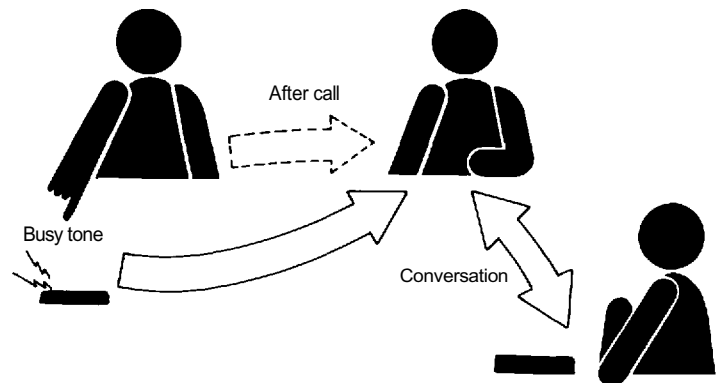

## 8) Busy call back


When the called station is busy, dialing **6** permits this function to be registered and terminates the call after a confirmation tone. As soon as the line is freed, the calling party is called by the distinctive "busy-call-back" tone that sounds for 10 seconds. By one-touch dialing any one of **1~9**, **0**, **\*** or **#** key during the 10-second period, the calling party can be connected to the called party.

The disadvantage of the camp-on-busy function is that a link is occupied and busy tone is heard from your station all the way while you are waiting. This problem can be avoided by using the busy call back function that can improve the availability of speech paths as well as enables you to wait without being annoyed by "noisy" busy tone.

You can only register one (1) busy station for this function. Once the function has been programmed into your station, you are put in the simple "busy waiting" mode even when you depress **6** in an attempt to register other busy stations for this function.



It is possible to make or receive other calls while waiting after this function has been programmed. However, if you are still using your station for conversation with the third party when the busy station registered for this function is freed, the registered busy call back function will be cancelled.

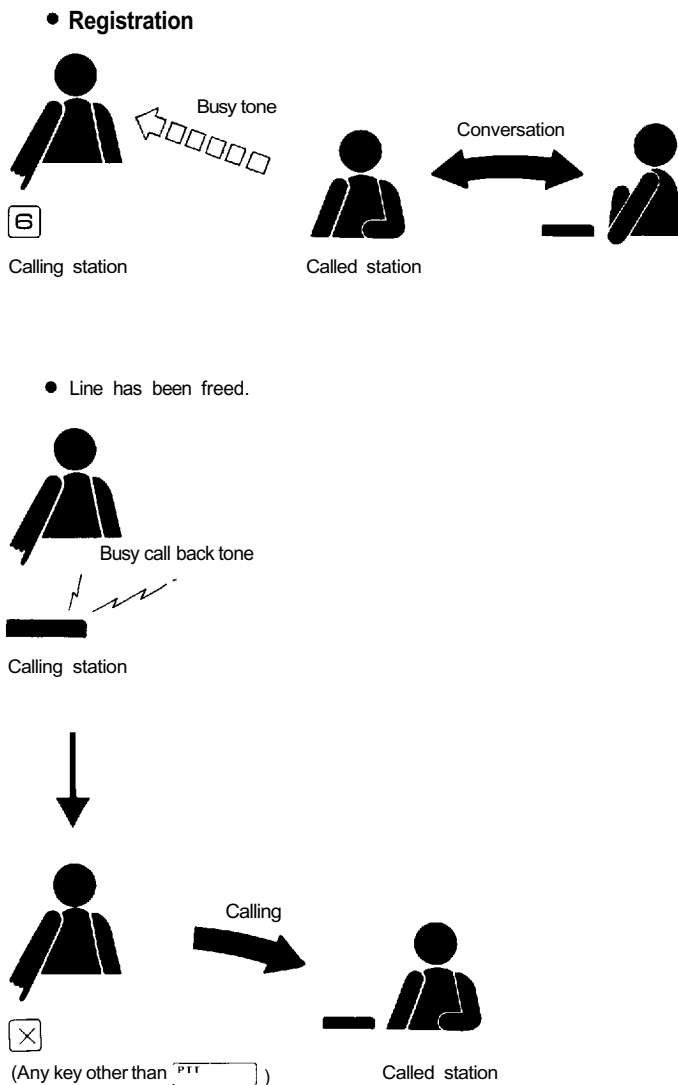Camp-on-busy is prior to busy call back.






## 9) Call Transfer

### Call Transfer from Called Station

During the conversation, first dial  (the Station Number of the person the call is to be transferred to). The original call is then held, while the third party is called and asked whether he will accept the call. If he agrees to accept the call, dial  or hang up a handset and the transfer will be completed.

This function allows called party to transfer that call to another station. The party to whom the call is to be transferred may be called using either the station number or the personal number.






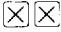
### Call Hold and Call Back from Calling or Called Station

During the conversation, first dial  (the Station Number of the third party). The original party is then placed on hold as the third party is called. Upon completion of the conversation with the third party, the party called touch-dials  or the third party touch-dials  or replaces a handset. This allows the original conversation to resume.


The Transfer function is combined with the Call holding function.

When two parties are talking, either one can be temporarily placed on hold to permit the calling of another station. As soon as the conversation with the third party is over, the original conversation can be resumed.

 The third party can be called by using either the station number or his personal number.

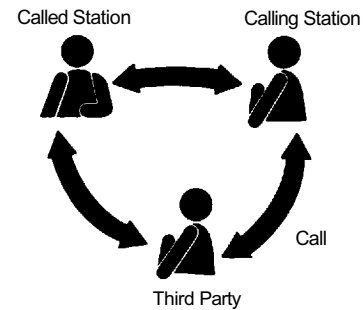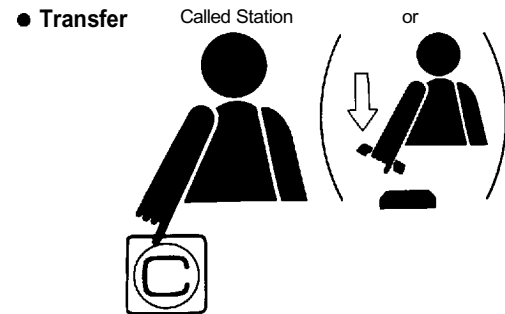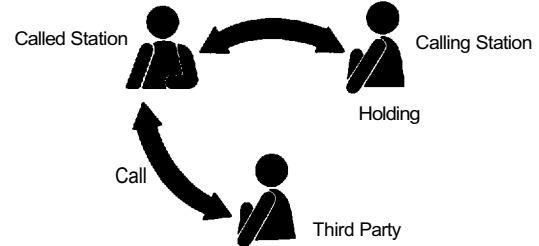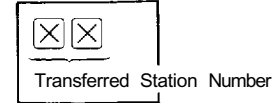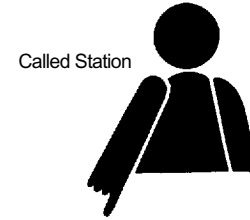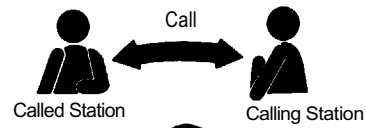

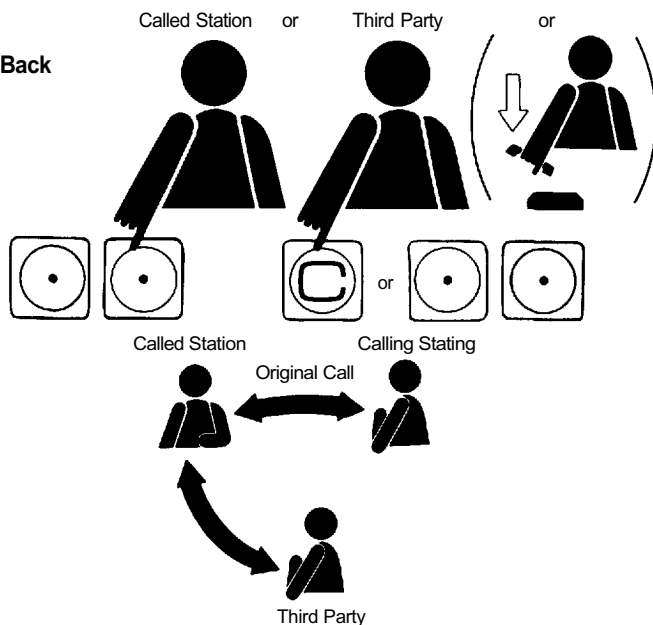


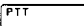
### • Call Back




# 10) Conference


A conference call can be made with up to 4 persons. For a conference under this function the other participants may be called either through their station number or Personal Number.


The person who proposes the conference may dial   
 (Station Number of the 1st participant)  
 After receiving 2nd person's consent, he may then dial   
 (2nd participant)  
 After receiving 3rd person's consent, he may now dial   
 (the last participant)

At this point, the 4-man conference may begin. Only the person who proposed the conference can hold a handsfree conference, while the other participants have to depress  to speak.



**Note:**

- 1) Only the person who proposed the conference can call the other participants.
- 2) All the participants except the person who originated the conference have to depress  even when they speak with their station handset lifted.

It is possible to propose the conference during normal conversation if either party dials   
 (2nd participant)



A person wishing to drop out of the conference should dial  or hang up a handset at his station.

Any of the participants who wish to drop out during the conference may do so as long as it's not the party who originated the conference.


The function is cancelled and the normal mode is restored when the person who arranged the conference dials   
 The conference is terminated when the party who arranged the conference dials  or hangs up a handset


When the conference has been terminated by the party who originated it, the other participants cannot continue the conference.

- Conference call can be made with up to 4 persons.

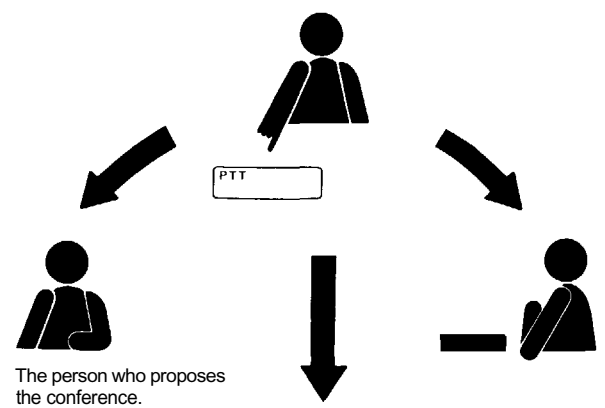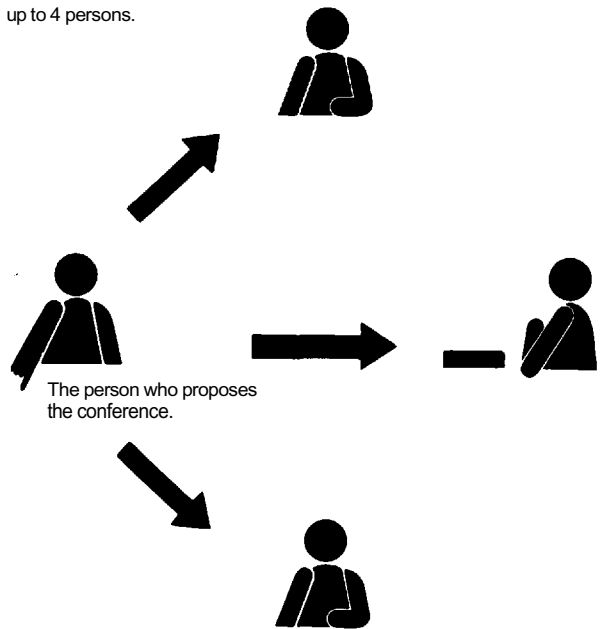

- Dialing of conference member.


  
 Station number of the participant.

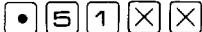  
 Personal number of the participant.

- The participants may be called either through their Station number or Personal number.


# 11) Personal Number Call

A personal number may be registered at any master station which the person to whom the number is assigned expects to be. A party wishing to receive personal number calls at a specific station may register his number at that station by dialing

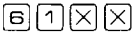 (confirmation tone)  
 Personal Number


"Personal" number which may be programmed to any master station in the system. This personal number, which is completely independent of station numbers, may be programmed at any master station, and any previous programming of that same number at any other station is automatically cancelled. When the party calling has dialed the number to which he wishes to speak, the call is then routed to the station at which the Personal Number was last registered. Up to 32 personal numbers may be registered per station. The numbers which may be assigned in this group are 100 through 131.

Personal number programming can also be cancelled at any station by merely dialing:


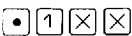
 (confirmation tone)  
 Personal Number

When anyone having a personal number leaves the office, he merely cancels the programming of his personal number. With the personal number cancelled, any incoming calls to that number will be answered by a dial tone, indicating that he is not available.


## • Registration

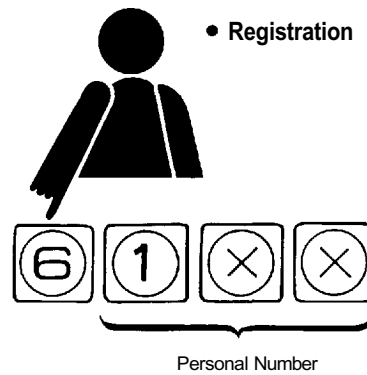

## • Personal Number Call

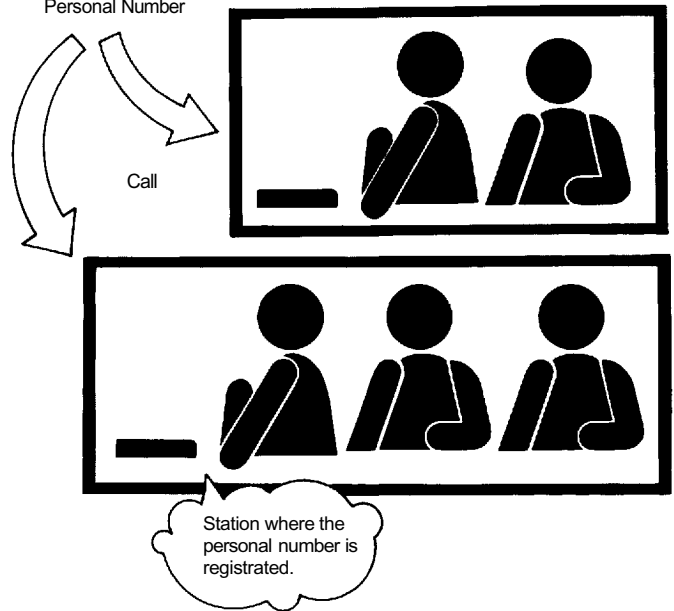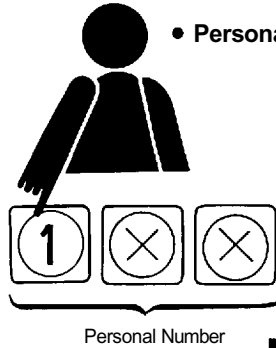

## • Cancellation (At any station)

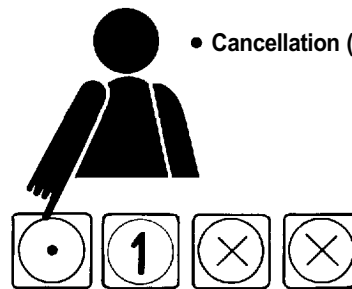


## 12) Master/Sub relationship

Master/substation associations are set up by using station No.24 as the programming station. Once these relationships have been established, substations can then contact their designated master stations by simply touch-dialing



If handset substation is used, substations can be connected to their designated master stations by simply picking up a handset.


Substations can initiate calls only to specific master stations. This is done by single touch-dialing, and will only connect the substation to one specific master. Several substations can be connected with a single specific master station.

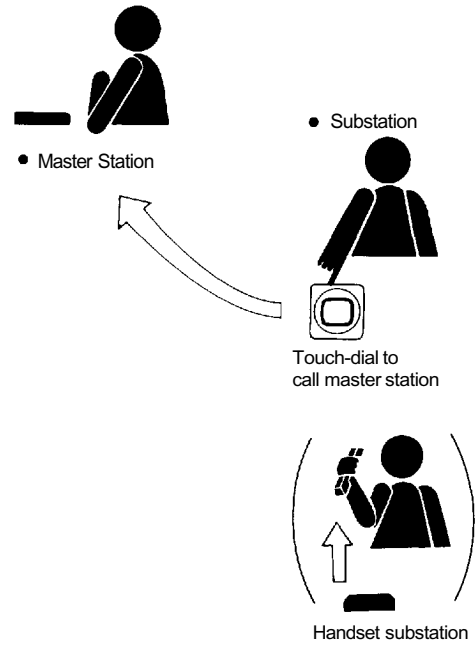

## 13) Highest Executive Priority


This function is available for those stations specifically programmed for this function at station No.24. When the called party is busy, dial [9]. Depressing the first [9] key sends a Hurry-up tone for 1 second. Depress another [9] key while the hurry-up tone is being sounded, and the call is put through, terminating the original conversation.

When the called station is busy, this function allows forced interruption for priority conversation.

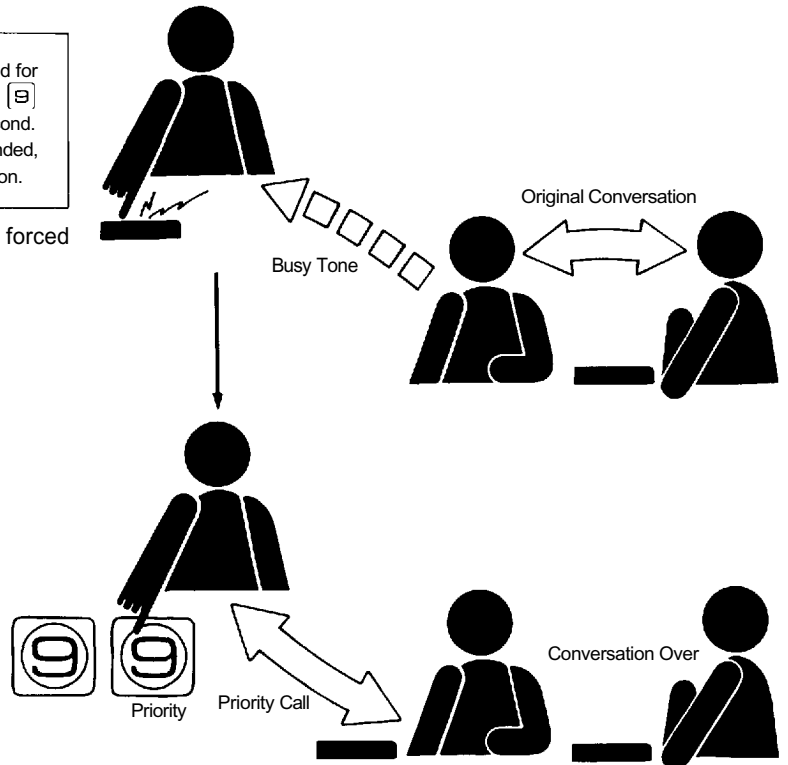


# 14) Secretary Transfer

This function is only available when a specified station is programmed for this purpose with use of Station No.24 in the programming mode. Automatic transfer of incoming calls from an executive to his secretary is accomplished by placing the Privacy switch on his station in the ON position.



This position allows a secretary to accept all incoming calls placed to an executive. In this condition, no Privacy tone is sounded in the executive's station even when there is an incoming call.

For the executive to accept calls directed to his station, he simply moves the privacy switch to the left, or OFF position.



It is also possible for the executive to accept calls at his station.

There is no limit to the number of Executive/Secretary pairings. A plural of executives may be programmed into one same secretary's station.




When a secretary who is already programmed for this function wishes another secretary to accept all incoming calls directed to an executive, station No.24 programming of another secretary should be set up in the exchange. Then, the calls can be rerouted to another secretary if the executive and the secretary first registered place their Privacy switches in the ON position.


Adoption of "Transfer" allows rerouting of the call transferred to the secretary back to the executive's station.


When a secretary answering the call dials  Executive's station number

the privacy tone sounds for five seconds in both the executive's and secretary's stations, while placing a caller on hold. If the executive shifts the privacy switch to the left position, or depresses any key ( ~ , , , , ), or picks up a handset, he can talk with the secretary. If the call held is to then be transferred back to the executive's station, the secretary is to touch-dial  or to hang up a handset, and the original calling station will be connected to the executive's station.

To restore the original conversation between the secretary and the calling station, the secretary dials  or the executive depresses  or  or replaces his station handset.

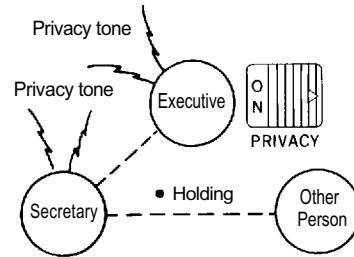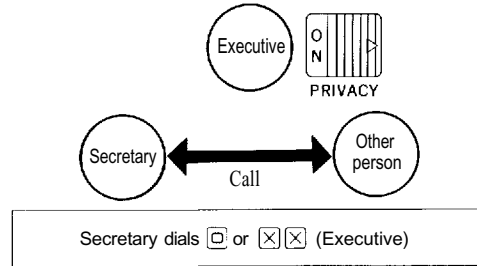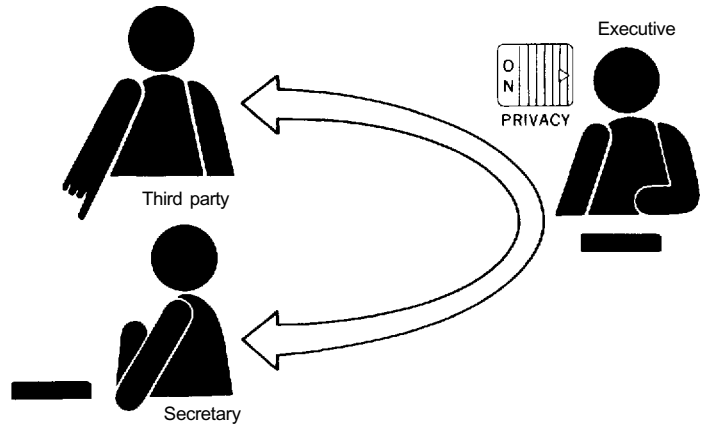

Executive  or depresses any of the keys      or picks up a handset

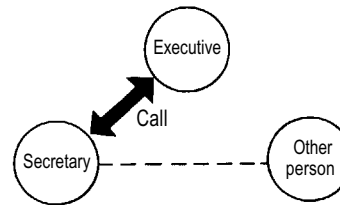


• Call Transfer

Secretary dials  or hangs up a handset

• Call Back

Secretary dials

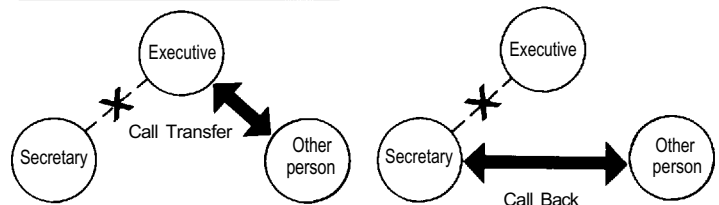





# 15) Continuous Calling Tone

Station No. 24 programming must be established to allow specific stations to be called by a continuous calling tone.

When the station registered for this function receives calls, a calling tone continues till the called party depresses

1 ~  9,  0,  \* or  #  
 (except  PTT key)

- When calls cannot be answered immediately or when it is difficult to hear a normal calling tone due to high background noise, the station should be provided with the continuous calling tone function.
- When the caller depresses the  PTT bar while the continuous calling tone sounds, he can make a one-way voice call to the called person. When the  PTT bar is released, the continuous calling tone returns.

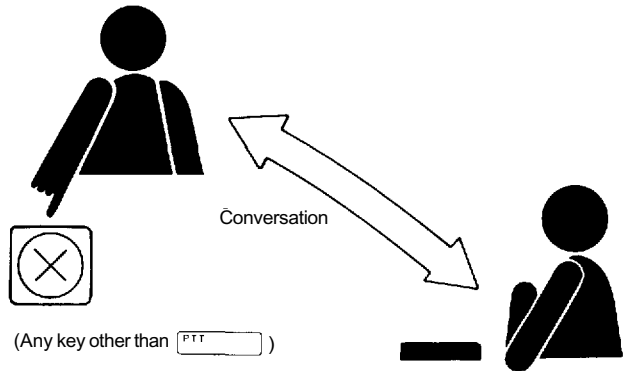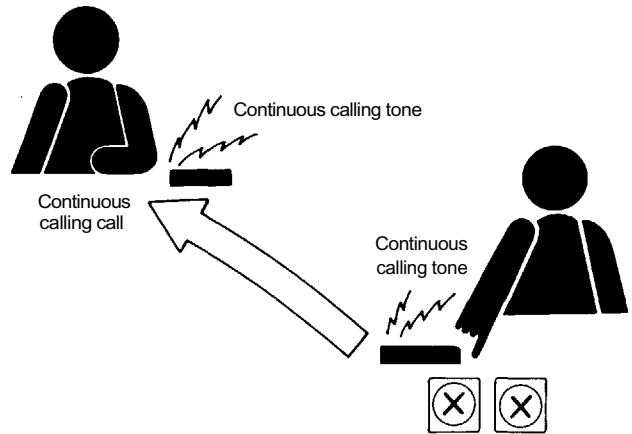

## <Comparison of calling tones>

| Type of stations<br>(Specific station provided with<br>"Continuous calling tone" function by<br>station No. 24 programming) | Nature of calling tone   |  |
|---|--|--|
|   | Privacy switch in OFF position   | Privacy switch in ON position  |
| Non-programmed station (standard)   | Single "trill" calling tone<br>(Call is put through immediately<br>after calling tone) | Privacy tone   |
| Programmed station  | Continuous calling tone  | Privacy tone   |
| Station registered as handset station   | Single "trill" calling tone<br>(Call is put through immediately<br>after calling tone) | Continuous calling tone  |
| Responding to a call made by<br>continuous calling tone   | Depress any dial key other than <input type="checkbox"/> PTT key.                      | 1. Depress any dial key other than <input type="checkbox"/> PTT key.<br>2. Pick up a handset.<br>3. Shift Privacy switch to OFF. |

## 16) Station paging

At the time of system installation, station No.24 programming has to be established for programming specific stations as operating station for station paging or emergency all-call paging. It is also necessary to group stations for each individual paging zone.

A variety of station paging modes allows paging over a wide area from any station. (It is possible to limit paging stations to specific stations.) Station paging modes include


1. all-call paging, individual zone paging and selected station paging, all of which are for calling desired station groups, and
2. emergency all-call paging given the highest priority and for calling over the entire area.

1. All-call paging, individual zone paging and selected station paging

### (1) All-call paging and individual zone paging

Dial


**8** **X** (0 through 3. 0: All-call. 1 through 3: Zone number) from the paging operation station, and the desired station group can be paged. To wait for a response after terminating paging, depress **C** or replace a station handset. When it is desirable to wait for the response without terminating paging, dial **7** (Mic off) while waiting.

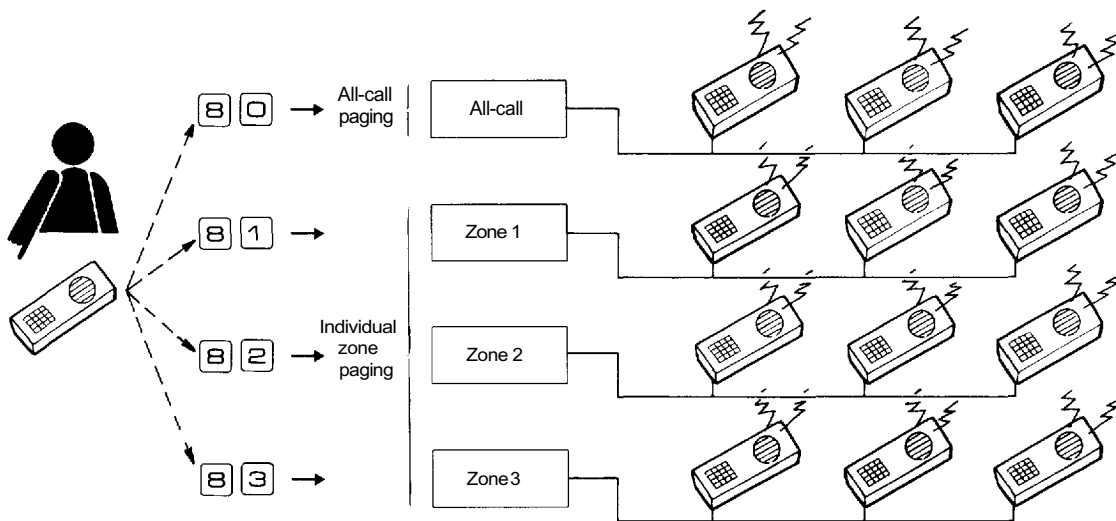

Group paging assignment

| Station No. | All-call | Zone 1 | Zone 2 | Zone3 |
|-------------|----------|--------|--------|-------|
| 20          | ○        | ○      | ×      | ○     |
| 21          | ○        | ×      | ○      | ○     |
| 22          | ×        | ○      | ○      | ×     |
| 23          | ○        | ○      | ×      | ×     |
| 48          | ○        | ×      | ○      | ×     |
| 49          | ○        | ×      | ×      | ○     |
| 50          | ○        | ×      | ×      | ○     |
| 51          | ○        | ○      | ×      | ○     |


## (2) Selected station paging call

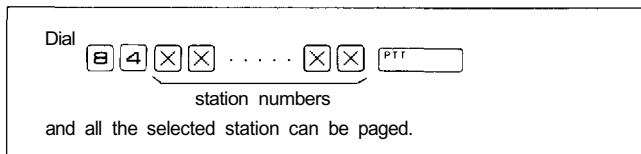


This function is convenient when it is desirable to page only specified stations. (In the case of normal station paging, all the stations of the paged zone are called.)

### Note.

- 1) All-call paging takes precedence of individual zone paging that is equal to selected station paging in priority. When there is all-call paging during zone or selected station paging, zone or selected station paging is terminated.
- 2) When the station in the busy mode is paged, the conversation is interrupted to allow the paging call to go through. In this event, a holding tone is transmitted to the conversation partner of the paged party if that partner's station is not within the same station group of the paged party. The original conversation is restored immediately after the paging call is finished.
- 3) Dialing is even possible from the station that is being paged through station paging. This, however, terminates the paging call.
- 4) When the station that is being paged through station paging is called, a busy tone is heard from the calling station.

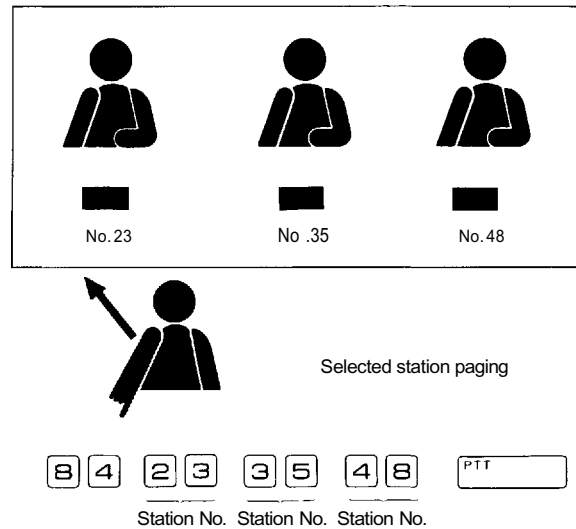


## (3) Paging response

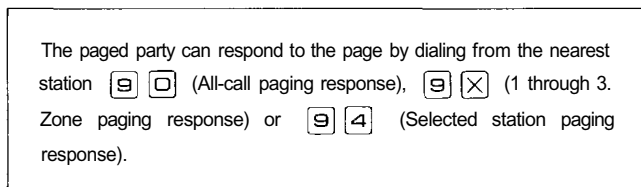

### Note.

Those paged during conversation and wishing to quickly answer from the interrupted station should depress [C] or replace a handset before dialing for response.

## 2. Emergency all-call paging

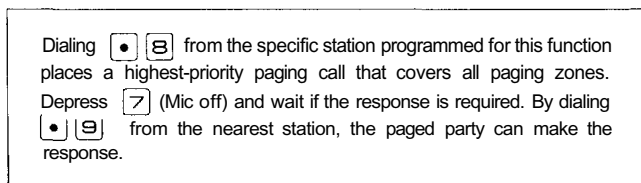

### Note.

- 1) Making the emergency all-call paging terminates all other paging calls or conversation.
- 2) It is impossible to terminate the emergency all-call paging while waiting for the response. The paging party has to wait for the response without terminating it.
- 3) Even during the emergency all-call paging, the following functions may be operated from the station so long as it is not the station which initiated the emergency all-call paging.
  - A) Response to the emergency all-call paging
  - B) Selection of desired BGM program
  - C) Door remote control
  - D) General purpose control

## 17) BGM


This function requires No. 24 programming at the time of system installation.

A maximum of 3 BGM channels is available to each station when external BGM equipment are connected to the system.

Depress   (channels No. 1 through No. 3), and selected BGM is provided from each station. To cut BGM, dial   .

### Note.

- 1) It is possible to make or receive a call even while the station is used for BGM. In this event, BGM is automatically disconnected.
- 2) Disconnected BGM is restored as soon as paging or call is finished.
- 3) BGM channel may be selected regardless of whether all the links are occupied.

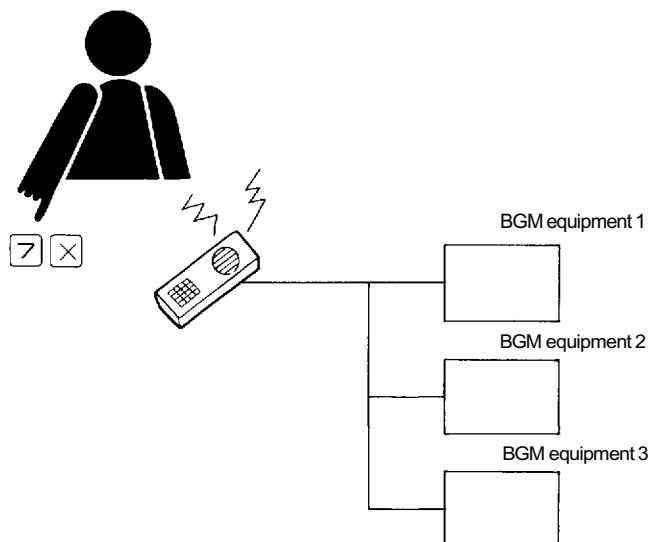

## 18) Alarm and time information

Station No.24 programming has to be set up to register specific stations for this function. When there is an alarm or time information signal input in the exchange, an alarm or time information signal is distributed from each such specific station, overriding all other functions in operation including BGM service. After the signal has been sent out, the BGM service is resumed.


### Note.

- 1) It is impossible to make or receive a call while this function is being operated.
- 2) Use the external equipment for the activation input or each signal.

## 19) Pocket pagers

It is possible to call a pager receiver from the station.

(1) If the receiver number and station number are identical.

When there is no response from the called party, dial  (confirmation tone) and the called party's receiver may be called.

### Note.

- 1) This dial operation may be used only when the station number was first called.
- 2) It is impossible to call the pager when the call is made during conference, mic off or call transfer operation.

(2) If the receiver number and station number are not identical.

To call, depress


 (confirmation tone)

(00-99: receiver number)

This dial operation is employed to call the receivers No.0 to No.19 or No.52 to No.99 or when the receiver number is not equal to the station number. Note that this dial operation is impossible from the station in use for conversation.

The station which called the receiver waits for the response being disconnected from the speech path after the confirmation tone is heard. It can receive a call from the other station while waiting.

Dialing

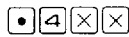


(called party's receiver number 00 through 99)

from any master station enables the called party to respond to the call.

### Note.

- 1) Since there are 4 pager calling lines, 4 receivers can be called at the same time. The called person is to answer within 1 minute after the call has been received, or the call is disconnected from the pager calling line.
- 2) When there is no idle pager calling line or the called receiver is busy, a busy tone sounds 3 times in the caller's station and the call is terminated.

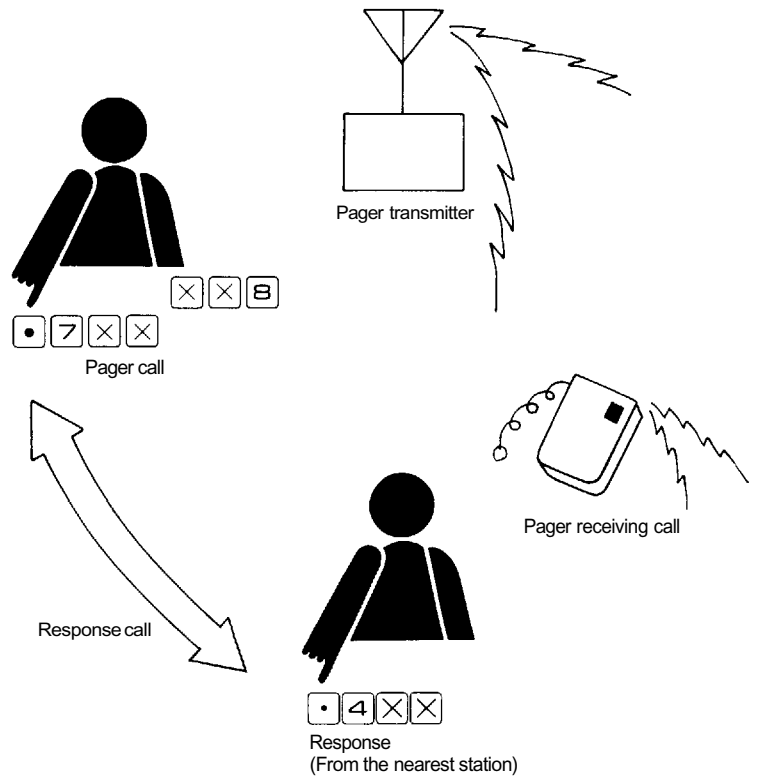

## 20) Door Remote Control


Door-lock release can be controlled from stations registered for this function with use of No.24 station as Programming station.

Dial **5 2** and the one-shot make relay output of zone 1 output is generated for approx. 3 seconds.  
Dial **5 3** and the make relay output of zone 2 is generated for approx. 3 seconds.

**Note.**

- 1) It is also possible to remotely control the door-lock release from the busy station or even when all the links are busy.
- 2) Stations registered for this function may also be used for operating "General purpose control".

Example

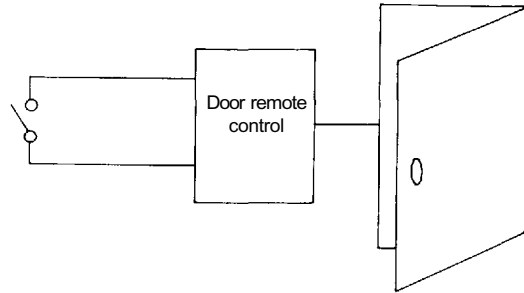


---

## 21) Press-to-talk control

Call station No. 27.  
One way conversation is activated while the press-to-talk bar is continuously depressed, same as the press-to-talk (selected simple) function, and a relay is activated with continuous make-contact.  
One way conversation is reversed when the press-to-talk bar is released, and the relay is activated with break-contact.

**Note.**

It is possible to use a relay make output for door-lock release control or for controlling Radio transmitting/receiving through interface.

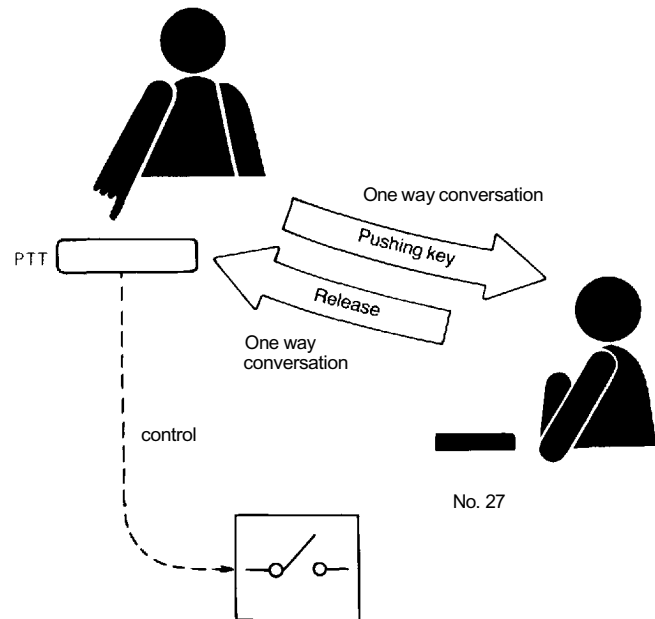


## 22) PA paging

At the time of system installation, No.24 programming has to be established to allow this function. (External PA paging cannot be used together with General purpose control.)

1. With this function in use, it is possible to place paging over the desired zone through stations and external PA speakers.
2. PA paging includes
  - (1) Individual zone paging
  - (2) all-call paging, and
  - (3) emergency all-call paging.


Although the selected station paging function is included in station paging, PA paging does not have it. (Refer to the section "Station paging" for operations.)

3. It is possible to use only external PA speakers to make individual zone paging or all-call paging. In this event, no station conversation is interrupted. (Registered station group assignment has to be cancelled by using No.24 programming.)

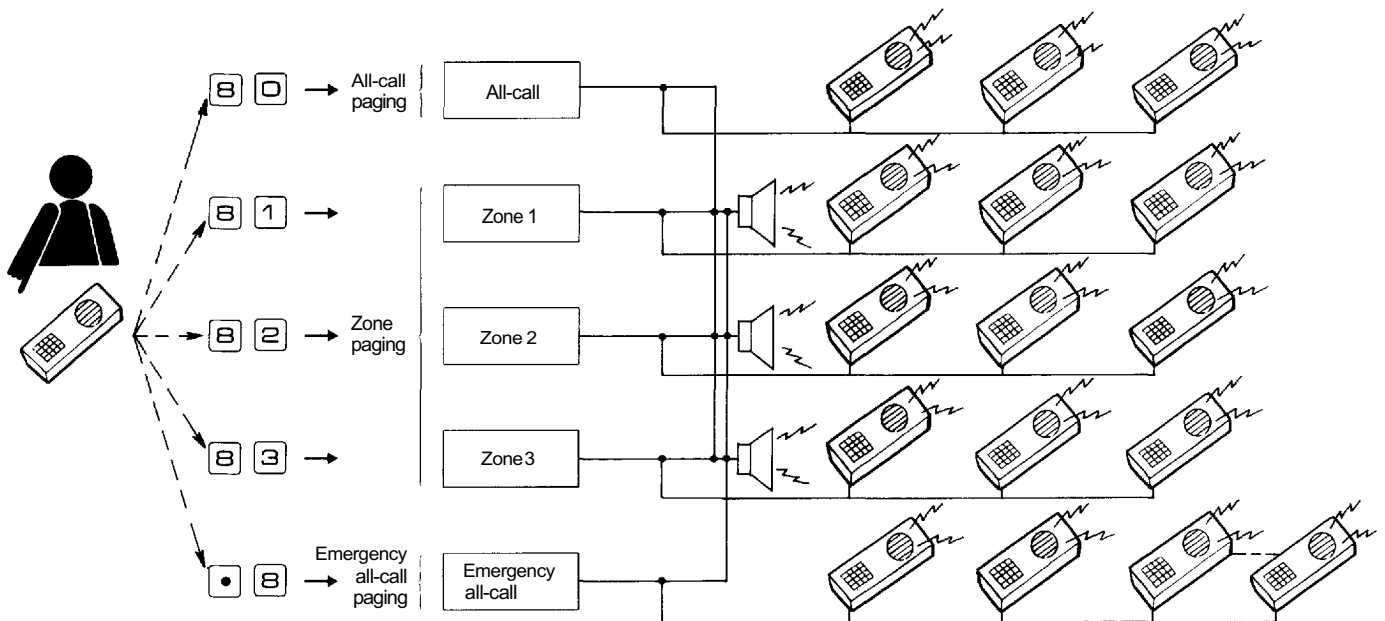


## 23) Simplified Paging

 If an external speaker is connected instead of a station, and the caller dials that station number to page, simplified paging can be made without the PA amplifier.

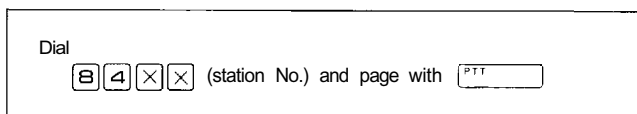

### Note.

That Simplified Paging is accomplished by using the selective paging function. Refer to the section "Selective Paging" for details.

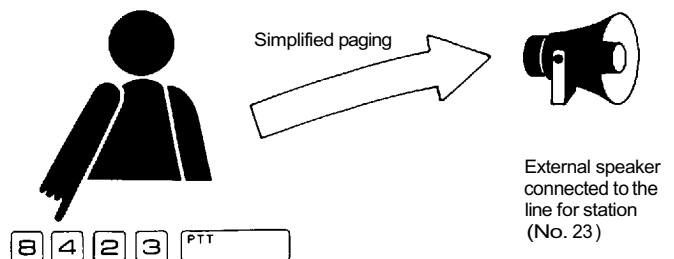

## 24) General purpose control

At the time of system installation, No.24 programming must have been set up to allow this function. (It is impossible to use both PA paging and general purpose control in the same system.) Also, specific station have to be registered for door remote/general purpose control.

External equipment can be controlled with 3 relays.

|            |                            |                            |   |
|------------|----------------------------|----------------------------|---|
| 1. Dialing | <input type="checkbox"/> 5 | <input type="checkbox"/> 4 | makes a relay (A) contact continuously. |
| 2. Dialing | <input type="checkbox"/> 5 | <input type="checkbox"/> 5 | breaks a relay (A) contact              |
| 3. Dialing | <input type="checkbox"/> 5 | <input type="checkbox"/> 6 | makes a relay (B) contact continuously. |
| 4. Dialing | <input type="checkbox"/> 5 | <input type="checkbox"/> 7 | breaks a relay (B) contact              |
| 5. Dialing | <input type="checkbox"/> 5 | <input type="checkbox"/> 8 | makes a relay (C) contact continuously. |
| 6. Dialing | <input type="checkbox"/> 5 | <input type="checkbox"/> 9 | breaks a relay (C) contact              |

### Note.

- 1) This function may be operated even when all the speech links are occupied.
- 2) It is also possible to operate Door Remote Control from the station registered to operate General Purpose Control.

## 25) Speech message

No.24 programming has to be set up for registering this function.




With the speech message function in use, the message can be recorded for 32 seconds. There are a file for recording the called party's message ("response" message) distributed to the caller automatically, and another file used by the caller for recording his message after listening to the response message. The called party records his response message using the speech message function and sets the Privacy switch to ON before being away from his assigned station. This permits the recorded message to be automatically given to the party who made a call. The caller, if necessary, records his own message, which the called party can hear by shifting the Privacy switch back to OFF after coming back to his station.

### 1. Recording the response message.

By dialing  2 from the station registered for this function the response message can be recorded for a certain period of time. Depress  3 to monitor the recorded message. Placing the Privacy switch in the ON position automatically sends the message to the calling party.

### Note.

Recording of the response message is finished when a brief single tone is heard. Depressing  or replacing a handset before the brief tone sounds will erase all the previous messages.

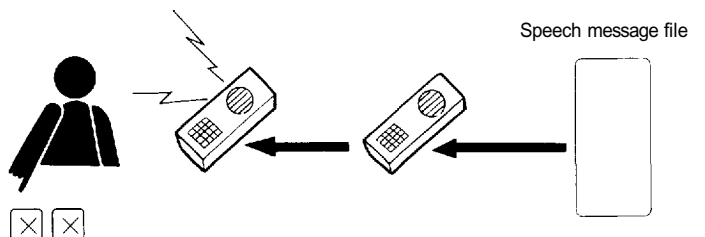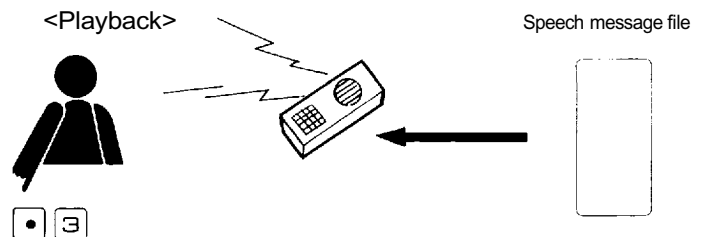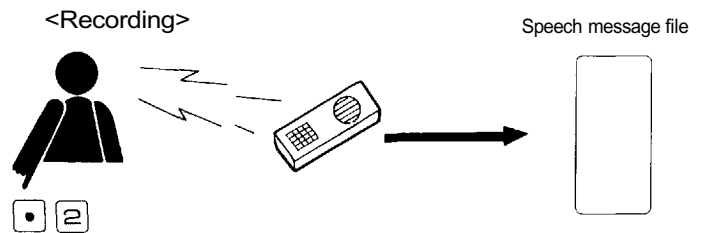





## 2. Recording the caller's message.

When the caller hears the response message, he dials  $\square \cdot \square \cdot 2$  after the message is over. This affords him an 8-second recording duration. The recorded message can be checked by depressing  $\square \cdot \square \cdot 3$ . If the recorded message must be changed, repeat the procedure from the beginning after erasing the previously recorded message by depressing  $\square \cdot \square \cdot 6$  (confirmation tone is sounded).

### Note.

- 1) When, during conference, mic off or call transfer operation, the caller holds his conversation partner and calls the station registered for the speech message function, the original conversation is automatically resumed as soon as the response message is provided to the caller.
- 2) When a brief single tone is heard immediately after dialing  $\square \cdot \square \cdot 2$ , this means no file is left over for recording the caller's message. Depress  $\square \cdot \square \cdot 6$  or hang up a handset.
- 3) When, during recording of the caller's message, the recording is interrupted by paging, etc., repeat the procedure from the beginning after depressing  $\square \cdot \square \cdot 6$ .

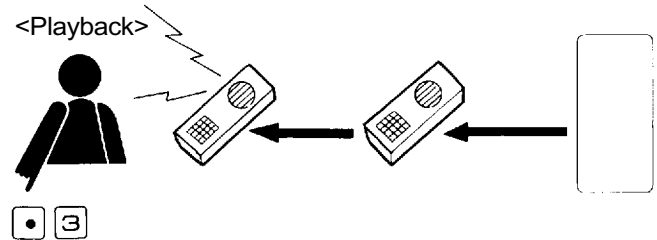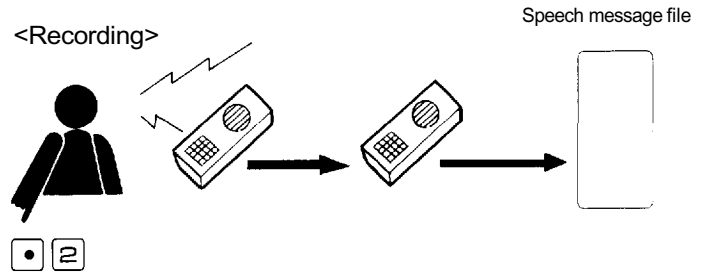


## 3. Playing back the recorded caller's message.

To play back the recorded messages from the parties who made calls, set the Privacy switch to OFF. Depressing the  $\square \cdot \square \cdot 6$  key allows the called party to hear the message again. By dialing  $\square \cdot \square \cdot 6$  all the messages can be erased.

### Note.

- 1) A brief tone sounds every one minute in the station at which the message from the caller has been recorded. (Set the Privacy switch to OFF to stop it.)
- 2) Once the Privacy switch has been shifted from ON to OFF, the recorded response message is erased.
- 3) Shifting the Privacy switch back to OFF sometimes causes the busy tone to sound. This indicates that the caller is in the process of either listening to the recorded response message or recording his message in the called station. In this event, just wait, and the call can be connected as soon as the caller finishes the recording or listening.

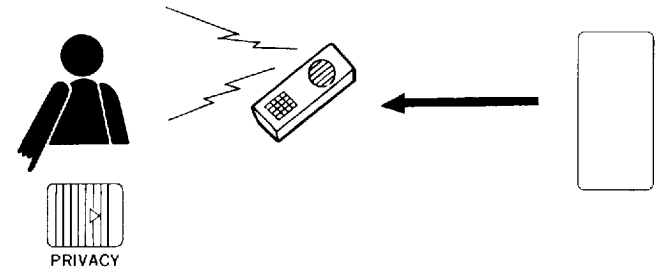



## 4. Registering the mode.

Three different modes are available in selection for recording the response message. Recording time for the caller's message is 8 seconds (fixed) per message.

Desired mode can be registered by dialing  $\square \cdot \square \cdot 0 \cdot \square \cdot \square \cdot X$  (mode No.0 through No.2) (confirmation tone)

- Mode No.0 ..... 16 seconds for response message.  
2×8 seconds for caller's message.
- Mode No.1 ..... 8 seconds for response message.  
3×8 seconds for caller's message.
- Mode No.2 ..... 32 seconds for response message.



Note that the speech message function is preset to mode No.0 when the system is shipped from the factory.

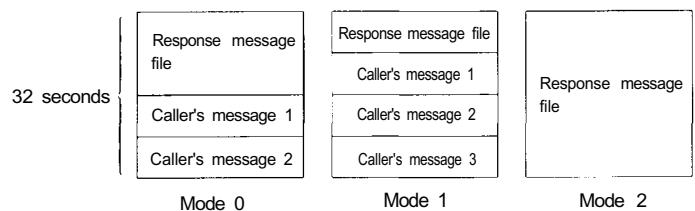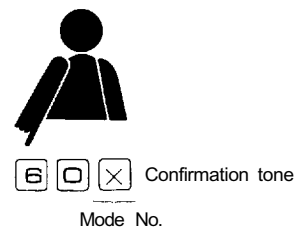

## 26) Tie-line

At the time of system installation, No.24 programming must be established.

 Dial  or  (number preprogrammed to identify the other exchange), and the exchange of the desired station is called. By further depressing  (station number) the call can be put through to the desired station.

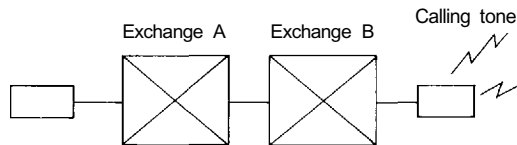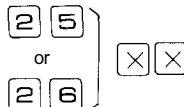

## 27) Points to remember

- 1) When, in dialing, all of the numbers are not dialed within 5 seconds, the station is automatically disconnected from the speech path. In this instance, the dialing process will have to be repeated from the beginning. (This function is employed to improve the availability of speech paths.)
- 2) Dialing while all the links (2 links) are busy causes a warning tone to be sounded, indicating that neither normal calls nor paging can be placed. Note that the following functions can be operated even when the system is in the link-busy mode (no warning tone sounds).
  1. BGM selection
  2. Door remote control
  3. General purpose control
  4. Emergency all-call paging
  5. Response to the paging party waiting for the response without temporarily disconnecting his station from the speech path.
- 3) In the event that an error has been made when dialing for transfer or conference at the start or during conversation, dial . This will restore the condition before the error was made, allowing the caller to make a correction without interrupting the call.
- 4) To terminate conversation, dial  or replace a station handset.

